


Eurobambino

CONTENTS

QTY	DESCRIPTION	COMPONENT REF:	QTY	DESCRIPTION	COMPONENT REF:
14	M6 Hex Head Screws	Screw	1	Barrier Bar, 297mm x 30mm Ø	Barrier Bar
2	Pre-assembled Side Panels	Side Panel	1	Horizontal Strut A, 392mm x 40mm	Strut A
1	Back Panel	Back Panel	2	Horizontal Strut B, 446mm x 40mm	Strut B
1	Seat Panel with straps	Seat	1	Allen Key	


STEP 1

Place one of the side panels vertically on the floor with the back panel slot away from you.

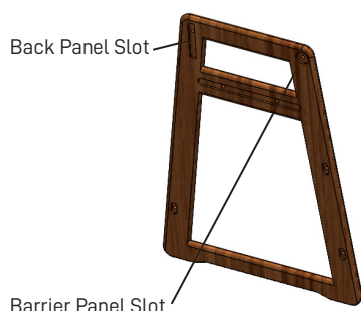


STEP 2

Fix the back panel into the back panel slot and secure using one of the supplied M6 screws.

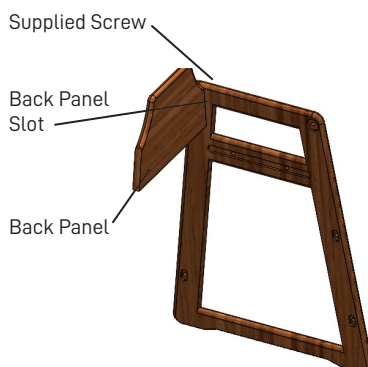


STEP 3

Using the same methods as Step 2 attach the seat and bar making sure angle cuts on each end of the bar are aligned.

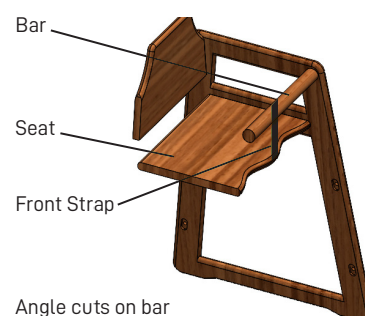


STEP 4

Using the same method as Steps 2 & 3 attach the struts into the remaining holes. Short strut (A) at the top. Align angle cuts on the end of each strut with the shorter width towards the top.

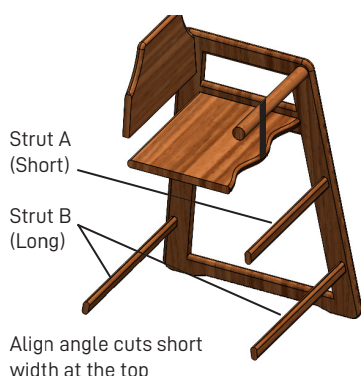

STEP 5

With the back, seat, bar and struts screwed into one side of the highchair lay it down horizontally. Place the other side on top, line it up and screw into place using the remaining supplied M6 screws.

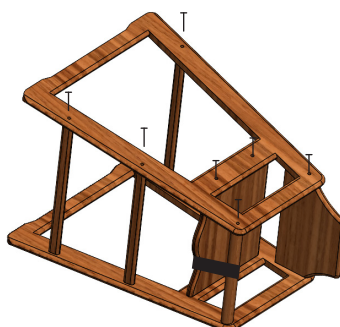

STEP 6

Stand the highchair back up. Tighten all the fixings to complete assembly.

