


Simplex

CONTENTS

QTY	DESCRIPTION	COMPONENT REF:	QTY	DESCRIPTION	COMPONENT REF:
14	Wood Screws	Screw	1	Barrier Bar 309mm x 30mm Ø	Barrier Bar
2	Pre-assembled Side Panels	Side Panel	1	Horizontal Strut A 362mm x 34mm	Strut A
1	Back Panel	Back Panel	2	Horizontal Strut B 413mm x 34mm	Strut B
1	Seat Panel with straps	Seat			


STEP 1

Place one of the side panels vertically on the floor with the back panel slot away from you.

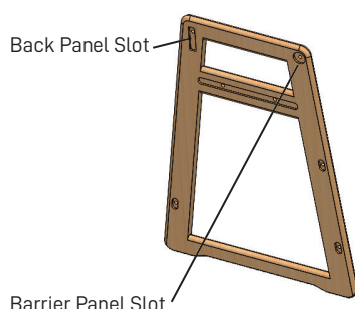


STEP 2

Fix the back panel into the back panel slot and secure using one of the supplied wood screws.

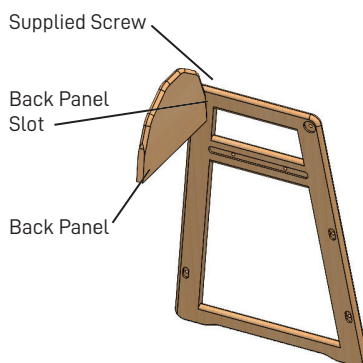


STEP 3

Using the same methods as Step 2 attach the seat and bar making sure angle cuts on each end of the bar are aligned.

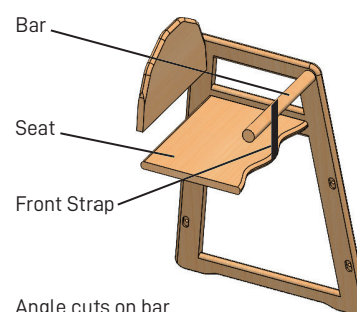


STEP 4

Using the same method as Steps 2 & 3 attach the struts into the remaining holes. Short strut (A) at the top. Align angle cuts on the end of each strut with the shorter width towards the top.

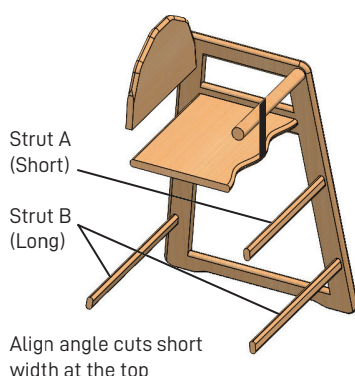

STEP 5

With the back, seat, bar and struts screwed into one side of the highchair lay it down horizontally. Place the other side on top, line it up and screw into place using the remaining supplied wood screws.

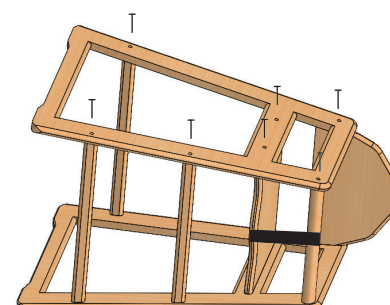

STEP 6

Stand the highchair back up. Tighten all the fixings to complete assembly.

